



How to turn ON the check/number system data

STEP 1 Scan the Enter/Exit Programming Mode	 ENTER/EXIT PROGRAMMING MODE
STEP 2 Scan the following Barcodes as needed	UPC-A Check Character Transmission Enable this option to transmit the check character along with UPC-A bar code data.
	 ★UPC-A Check Character Transmission = Send
	UPC-A Number System Character Transmission This feature enables/disables transmission of the UPC-A number system character.
	 ★UPC-A Number System Character = Transmit
	UPC-E Check Character Transmission Enable this option to transmit the check character along with UPC-E bar code data.
	 ★UPC-E Check Character Transmission = Send
	UPC-E Number System Character Transmission This feature enables/disables transmission of the UPC-E number system character.
	 ★UPC-E Number System Character = Transmit
STEP 3 Scan the "ENTER/EXIT PROGRAMMING MODE" to finalize/close the program.	 ENTER/EXIT PROGRAMMING MODE